

## Panel Builder 3 - PC12 Instruments

---



### Cabin Altitude

Displays the cabin altitude (for pressurized aircraft)


---



### Cabin Climb (Vertical Speed)

Displays the cabin climb rate (for pressurized aircraft)

---

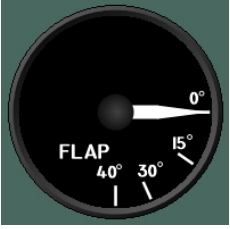

### Flaps Indicator

Shows the status of the Flaps

---



### Gear Status Indicator

Displays the status of the Landing Gear

---



### Radio ADF

Sets the frequencies of the ADF Radio

---



### Transponder

Sets the Transponder

---



### Engine Instruments PC12

Displays various Engine Instruments, Fuel, Outside Temperature and Local Date/Time

---



### Gen Load PC12

Displays the amps of the configured generator

---



### Gen Volts PC12

Displays the volts of the configured generator

---

## Panel Builder 3 - PC12 Instruments

### Altitude and Vertical Speed Preselect



Displays and sets the selected Altitude and Vertical Speed for the Autopilot

### Auto Pilot



Controls the AutoPilot

### Horizontal Situation Indicator



Displays the current heading with Bug for Autopilot and Course Information for VOR/GPS. ADF/VOR Bearing Display.

### Navigation Display 2



Displays ILS/VOR course and glideslope deviation with OBS knob and To/From Flag

### RMI



Displays the current heading and the direction of the tuned VOR1/ADF and VOR2/ADF (Left Right Button)

### Airspeed Indicator for PC12



Displays aiaspeed in knots with never exceed needle (variable)

### Altimeter with Barometric Pressure adjustment



Displays altitude in feet

### Artificial Horizon



Displays attitude of aircraft

### Vertical Speed Indicator



Displays the rate at which the aircraft climbs or descends in feet/minute